


# Making your rural home fire safe

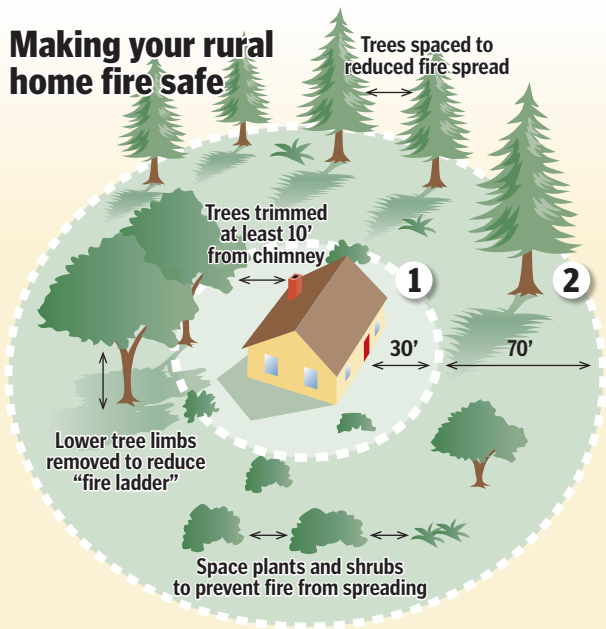

**1** Clearing an area of 30 feet immediately surrounding your home is critical. This area requires the greatest reduction in flammable vegetation.

**2** The fuel reduction zone in the remaining 70 feet (or to property line) will depend on the steepness of your property and the vegetation.